

Dance Pad

USER'S GUIDE

dreamGEAR's Dance Pad for Wii makes it possible to re-create the arcade smash hit experience! Bring the dance floor into any room with dreamGEAR's Dance Pad. Play the most popular dancing games and show off those hot dance moves! The Dance Pad features anti-slip surfaces so there is no more worrying about slipping when performing those tricky dance moves.



dreamGEAR®
www.dreamgear.net

Contents:

1 - High Quality Dance Pad

Setting Up The Dance Pad

Plug in the USB connector from the Dance Pad to the USB connection on the Wii console.

USING THE DANCE PAD

1) - **Button:** Change color of character / Change information displayed on screen / Display diet course list / Select participating character / Change style in record.

2) + **Button:** Arrange order of songs.

3) **A Button:** Confirm selection.

4) **B Button:** Cancel / Back to the previous screen.

5) **Directional Arrows:** Step on the arrows that correspond to the dance steps on the screen. During a freeze arrow, stand on the corresponding arrow through the entire duration of the arrow.

NOTE: Refer to the software user's guide for additional features and instructions.

Troubleshooting

Problem: The Dance Pad does not have any power.

Solution: 1) Make sure the USB connector is plugged in properly and securely. 2) Make sure the USB connector from the Dance Pad and the USB connection on the Wii console are not damaged or compromised.

Problem: The designated button functions on the Dance Pad do not work.

Solution: 1) Make sure the button functions are in correspondence with the mode being played. 2) Some button functions may be different depending on the mode. 3) Make sure the Dance Pad is not damaged, ripped, or compromised in any way.